

### Spare parts for worm gears (IW)

**Note:**




**Notes contain important information.**

**Warning:**



**Warnings indicate special methods or handling procedures which, if not followed properly, may result in serious injury.**

## Spare parts for worm gears (IW)

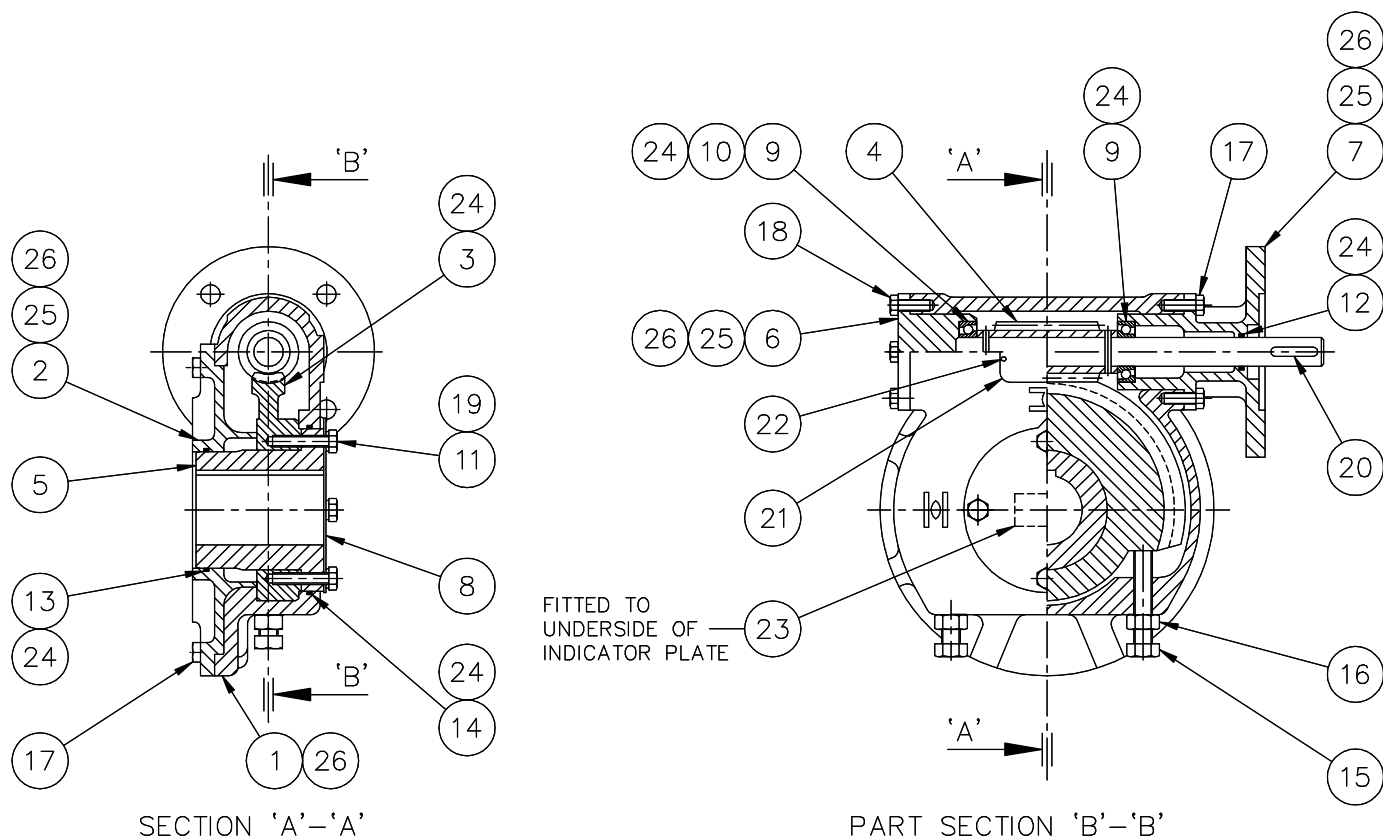

ITEM	DESCRIPTION	QUANTITY
1	GEARCASE	1
2	BASEPLATE	1
3	WORMWHEEL	1
4	WORM SHAFT	1
5	OUTPUT SLEEVE	1
6	ENDCAP	1
7	INPUT HOUSING	1
8	INDICATOR PLATE	1
9	ANGULAR CONTACT BEARING	2 (IW3 - 8) or 6 (IW9 - 11)
10	SHIM	1 (WHERE APPLICABLE)
11	HEX HEAD SCREW	4 (IW3 - 8) or 8 (IW9 - 11)
12	O RING	1
13	O RING	1
14	O RING	1
15	STOP BOLT	2
16	LOCK NUT	2
17	HEX HEAD SCREW	4 (IW3) or 8 (IW4 - 10) or 16 (IW11)
18	HEX HEAD SCREW	8 (IW3 - 8)
18	SOCKET HEAD CAPSCREW	16 (IW9 - 11)
19	NORDLOCK WASHER	4 (IW3 - 8) or 8 (IW9 - 11)
20	KEY	1
21	NAMEPLATE	1
22	RIVET	2
23	LABEL	1
24	GREASE	
25	SEALANT	
26	PRIMER	