

Positioner SRG2xx (SRG2XXEBA9753)**Index:**

1	General	2
2	Operation and electrical connection	2
3	Connection model	3
4	Instructions for adjustment	3
5	Technical data	6

Note:**Notes contain important information.****Warning:****Warnings indicate special methods or handling procedures which, if not followed properly, may result in serious injury.**

Positioner SRG2xx (SRG2XXEBA9753)

Connection model

The positioner can be supplied in sub-unit terminal screw block (fig. 3) or in insert card block (fig. 4) version. The connection model is determined by the third digit of the designation (SRGxx1 for insert card block (fig. 4) and SRGxx2 for sub-unit terminal screws (fig. 3)).

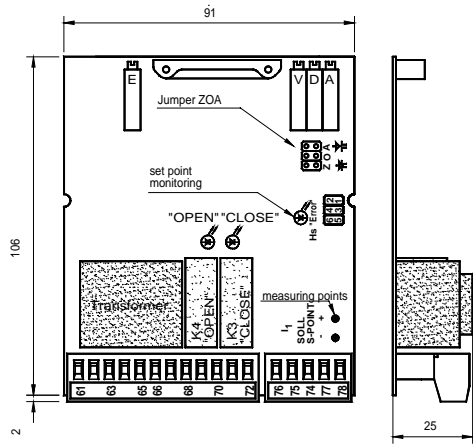


Fig.. 3: SRG2x2

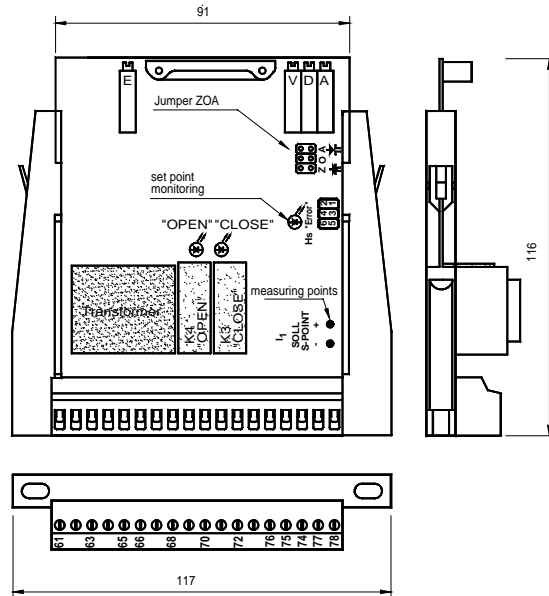


Fig.4: SRG2x1

3 Instructions for adjustment

Jumper J1:

You can determine the behaviour of the positioner in case of failure of the set point (e.g. wire fracture) by means of the J1 jumper. This function becomes active if the set point is lower than a certain threshold (see technical data). A response of the monitoring is signalled by the red LED Hs.

When operating the SRG2xx with the current signal 0...20mA the monitoring has to be switched off.

The following functions are possible:

Jumper at Z (fig. 5): with the response of the monitoring the K3 relay picks up. This corresponds to the control command "CLOSE".

Jumper at 0 (fig. 6): with the response of the monitoring both relays are released, the actuator stops.

Jumper at A (fig. 7): with the response of the monitoring the K4 relay picks up. This corresponds to the control command "OPEN".

Jumper slanted (fig. 8): The monitoring is switched off (necessary with 0...20mA).

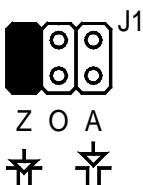


Fig.5: "CLOSE"

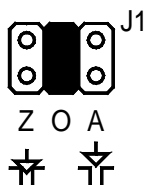


Fig.6: "STOP"

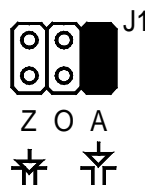


Fig.7: "OPEN"

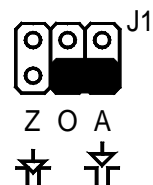


Fig.8: "0...20mA"

Positioner SRG2xx (SRG2XXEBA9753)

Switching difference D:

The switching difference (fig. 9) is adjusted using potentiometer D (figs. 3,4). If a more exact positioning of the actuator is desired, then the switching difference must be reduced. If the switching difference is too small, the actuator will start to oscillate. In case of actuator oscillation, the switching difference must be increased. This is achieved by turning potentiometer D in a counter-clockwise direction.

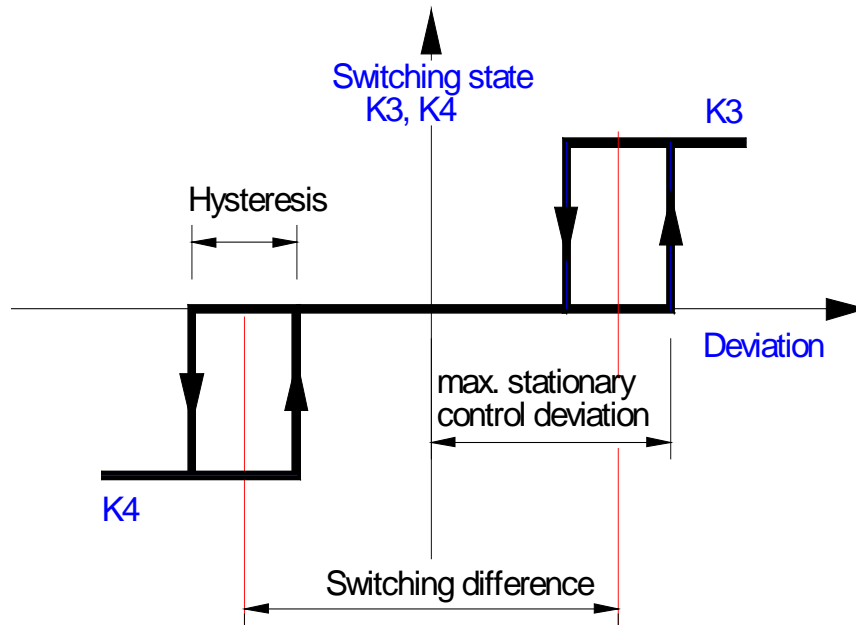


Fig.9: Switchpoints of 3-point controller

Filter V:

The filter type used is a phase-zero filter. This filter limits the increase speed of the control deviation. The effect of disturbances (high increase speed) is reduced effectively without impairing the control behaviour.

ATTENTION! A too large filter effect will cause the actuator to oscillate.

The filter effect is reduced by turning potentiometer V in a clockwise direction.

Adjustment procedure:

Adjust actuator according to operating instructions for the actuator and set jumper J1 to position 0...20mA (fig. 8). Set filter effect to minimum position by turning potentiometer V in clockwise direction.

Initial value: Feed 0mA (terminals 77 and 78) at set point input. The actuator moves into final position "CLOSED" and is switched off via microswitches S1 (torque depending closing) or S3 (travel depending closing). Turn potentiometer A on SRG in clockwise direction until relay K3 is released (can be seen on LED).

Final value with set point 0...20mA: Feed 20mA (terminal 77 (plus) and terminal 78 (minus) at set point input. The actuator moves in direction "OPEN" and the travel switch S4 (travel depending opening) and torque switch S2 (torque depending opening), respectively, should switch. If S4 or S2 have not already switched, turn potentiometer E in clockwise direction until S4 or S2 responds and relay K4 remains picked up. Then turn potentiometer E slowly in counter-clockwise direction until relay K4 is released and K3 does not pick up yet (switching difference).

Positioner SRG2xx (SRG2XXEBA9753)

Final value at set point 4...20mA: Feed 16mA (terminal 77 (plus) and terminal 78 (minus)) at set point input. The actuator moves in direction "OPEN" and the travel switch S4 (travel depending opening) and torque switch S2 (torque depending opening), respectively, should switch. If S4 or S2 have not already switched, turn potentiometer E in clockwise direction until S4 or S2 responds and relay K4 is released. Increase nominal value to 20mA, K4 picks up. Turn potentiometer A in counter-clockwise direction until relay K4 is released and K3 does not pick up yet.

Control and correction of adjustment:

Initial value: Feed minimum set point (0 or 4mA). The actuator moves into final position "CLOSED". If S3 or S1 switches and K3 remains picked up, turn potentiometer A in clockwise direction until K3 is released and K4 does not pick up yet. If K3 is released and S3 or S1 has not switched yet, turn potentiometer A in counter-clockwise direction until S3 or S1 switches. If K3 remains picked up, turn potentiometer A in clockwise direction until K3 is released and K4 does not pick up yet.

Final value: Feed set point 20mA. The actuator moves into final position "OPEN". If S4 or S2 switches and K4 remains picked up, turn potentiometer E in counter-clockwise direction until K4 is released and K3 does not pick up yet. If K4 is released and S3 or S1 has not switched yet, turn potentiometer E in clockwise direction until S3 or S1 switches. If K4 remains picked up, turn potentiometer E in counter-clockwise direction until K4 is released and K3 does not pick up yet.

Finally, determine the optimum adjustment of the switching difference with set point jumps. When turning potentiometer D in a counter-clockwise direction, the switching difference is increased. The set point jumps should be in the opposite direction (reverse clearance) and their size selected so that the actuator is able to reach its nominal speed. Then the filter effect can be increased to the desired stability reserve again by turning potentiometer V in a counter-clockwise direction. Finally, adjust behaviour in case of set point failure using jumper J1.

Positioner SRG2xx (SRG2XXEBA9753)

4 Technical data

Supply voltage SRG21X	220V AC, +10%/-15%, 47...63Hz
SRG22X	20...30V DC, smoothed; (+...63,-...61)
SRG23X	110V AC, +10%/-15%, 47...63Hz
Power consumption	approx. 1.5 VA
Ambient temperature	-20...+60°C
Set point signal	0(4)...20mA
Actual value potentiometer	100Ω...10kΩ
Switching threshold of the monitoring	max. 2.8mA
Switching difference	0,5...5% of final value
Hysteresis	approx. 25% of switching difference
Relay: Switching capacity	4A, 250V AC1
Mechanical life	20 mill. cycles

Electromagnetic compatibility:

The function of the SRG can be influenced by heavy electro-magnetic disturbances. After interference decay, the original function is restored and new alignment is not necessary. We advise to use shielded cables for the signal lines of the SRG.